

Unpacking Instructions for CS1.6 and CS2.4

*** Please save this and all packaging material for future use ***

1. With speaker lying on either side, open bottom of carton and fold all four carton flaps out. It will be necessary to lift the bottom of the carton off the floor in order to fold the bottom flap completely out and under the carton.
2. Stand the speaker upright on the plywood bottom pack.
3. Open top carton flaps and remove top pack assembly and long cardboard corner braces.
4. Lift the carton off the speaker.
5. Lift the speaker off the plywood and foam bottom pack assembly.
6. Remove the rubber bands and plastic bag.

Rewrapping Instructions for CS1.6 and CS2.4

1. Place plastic bag over the speaker and secure it with the 2 large rubber bands.
2. Place the speaker in the bottom pack with the back facing the side with the dentils. Ensure that the plastic bag is secured underneath the speaker.
3. Place the carton over the speaker with the finish and serial number information located at the back of the speaker.
4. Carefully insert 4 long cardboard corner braces into the carton. They should be secured between the foam bottom pack and the carton.
5. Be certain that the corner braces are firmly in place against the corners of the carton and press the top pack assembly down into position.
6. Close and tape top carton flaps.
7. Gently lay the speaker on its side while holding the bottom pack in place.
8. Stand carton upside down. Close and tape bottom carton flaps.
9. Return packed speaker to upright position before storing or shipping.