

Unpacking Instructions for CS3.7

Please save these instructions and all packaging material for future use

1. With speaker lying on either side, open bottom of carton and fold all four carton flaps out. It will be necessary to lift the bottom of the carton off the floor in order to fold the bottom flap completely out and under the carton.
2. Stand the speaker upright on the plywood bottom pack.
3. Open top carton flaps and remove top plywood, styrofoam pack, and 4 long cardboard corner protectors.
4. Lift the carton off the speaker.
5. Lift the speaker off the plywood and foam bottom pack assembly.
6. Remove the plastic bag.

PLEASE NOTE!
The stabilizer pins
are packed in the
styrofoam pack,
under the top
plywood piece.

Repacking Instructions for CS3.7

Note: The stabilizer pins should be removed before repacking the speaker.

1. Place speaker in plastic bag and tape bag closed.
2. Place the speaker in the bottom pack.
3. Place the carton over the speaker with the finish and serial number information located at the back of the speaker.
4. Carefully insert 4 long cardboard corner protectors into the carton. They should be positioned between the foam bottom pack and the carton.
5. Position top styrofoam pack, then place plywood on top. Close and tape top carton flaps.
6. Gently lay the speaker on its side while holding the bottom pack in place up in the carton.
7. Stand carton upside down. Close and tape bottom carton flaps.
8. Return packed speaker to upright position before storing or shipping.